



EON ONE Compact

BATTERY POWERED | UNPARALLELED PORTABILITY | BLUETOOTH AUDIO

QUICKSTART GUIDE

1. CHARGE THE UNIT


1. Connect the power cord to the **Power Receptacle (H)**.
2. The **Battery Level Meter (I)** will illuminate in sequence from bottom to top, indicating the unit is charging.
3. The unit is charged when the **Battery Level Meter (I)** is fully illuminated when powered on or off.

2. PLUG IN THE INPUTS

1. Turn the **Master Volume Control (P)** all the way to the left before connecting any inputs.
2. Connect your devices to the **Input Jacks (B-D)**.

3. POWER ON THE UNIT

1. Hold the **Power Switch (A)** for 1 second. The **Bluetooth button (O)** will flash, indicating the unit is powering on. After 3 seconds, all LEDs will illuminate, indicating the unit is fully powered.

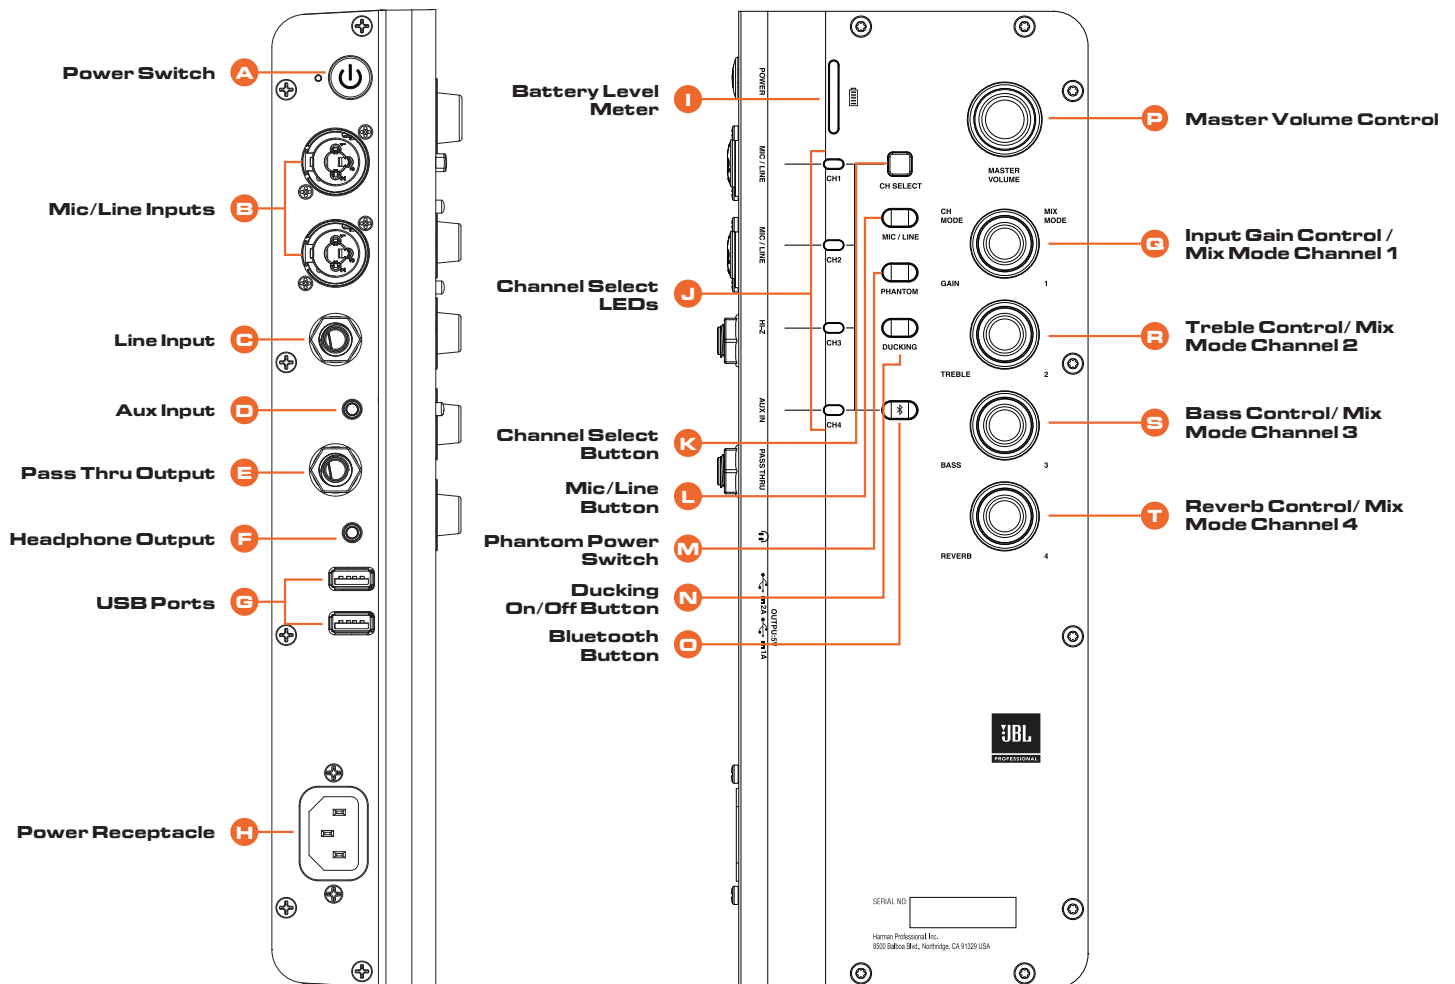

4. SET UP THE CHANNELS


1. Select a channel using the **Channel Select Button (K)**.
2. Set the channel's **Input Gain Control (Q)** to 12 o'clock.
3. Slowly turn the **Master Volume Control (P)** to the right until the desired volume is reached.
4. Adjust the **Treble Control (R)**, **Bass Control (S)** and **Reverb Control (T)** for each channel to achieve the desired mix and tonal balance.

6. INSTALL THE APP


1. Visit www.jblpro.com/eon-one-compact to download the app. Also available in the iTunes® store and Google Play™ store.

8. PLACE IN DESIRED LISTENING POSITION

Main Speaker Position

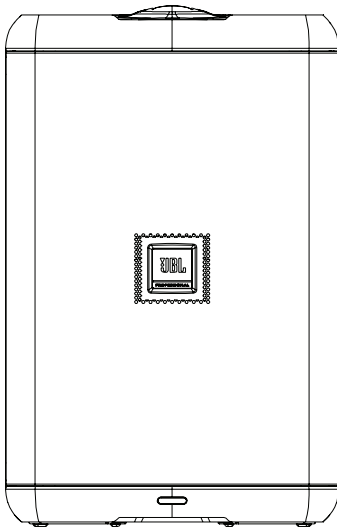

Monitor Speaker Position

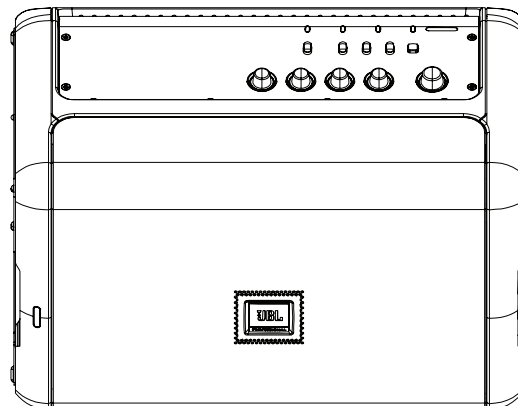

5. PAIR BLUETOOTH AUDIO

This device supports Bluetooth audio streaming.

To connect your device:

1. Turn on Bluetooth on your source device.
2. Press the **Bluetooth Button (O)**. The LED will blink when the EON ONE Compact is in pairing mode.
3. Find JBL EON ONE Compact on your device and select.

7. ENGAGE MIX MODE

1. Depress the **Channel Select Button (K)** until all **Channel Select LEDs (J)** light.
2. Mix mode now engaged. The four rotary controls (**Q-T**) now control the gain of each respective channel.

9. TO POWER OFF UNIT

1. Hold the **Power Switch (A)** for 3 seconds until all LEDs turn off.

Pour la version française de ce document, veuillez visiter le site www.jblpro.com/eon-one-compact

Die deutsche Version dieses Dokuments finden Sie unter www.jblpro.com/eon-one-compact

Para la versión en español de este documento, por favor visite www.jblpro.com/eon-one-compact

Para a versão em português deste documento, visite www.jblpro.com/eon-one-compact

Per la versione italiana di questo documento, visitate www.jblpro.com/eon-one-compact

이 문서의 한국어 버전은 www.jblpro.com/eon-one-compact 를 방문하십시오

有關本文檔的中文版，請訪問 www.jblpro.com/eon-one-compact

For complete documentation, visit

<http://www.jblpro.com/eon-one-compact>